



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Source: DVI	Menu	Blank	Mute
Power Off	Source: RGB1	Adj Up	Auto Image	Freeze
Volume Up	Source: RGB2	Adj Down	Focus Up	P in P
Volume Down		Adj Left	Focus Down	Zoom Up
Source: VIDEO		Adj Right	Magnify Up	Zoom Down
Source: S-VIDEO		Left Click	Magnify Down	Keystone +
Source: Component Vid		Right Click	Magnify Off	Keystone -


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

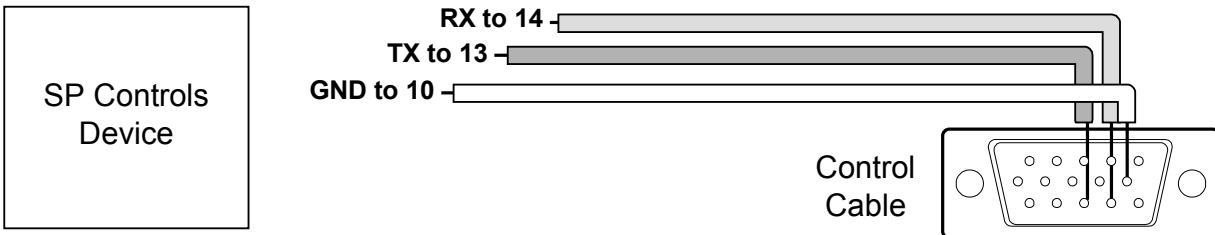

Connect female HD15 to projector port labeled *CONTROL*.
Serial Adapters (for NRC only): *Converter B, C, and D*