



I. Driver Features

1. Command Format

This device is primarily controlled through RS-232. IR may be used to toggle through computer and video inputs if desired.

2. RS-232 Commands

IR Commands

Power On	Menu	Blank On	Source: Computer (Toggle)
Power Off	Adj Up	Blank Off	Source: Video (Toggle)
Volume (Absolute)	Adj Down	Freeze On	
Source: Composite Video	Select	Freeze Off	
Source: S-Video	Mute On		
Source: Computer 1	Mute Off		
Source: Computer 2	Auto Image		


3. Other Driver Features

Default Power Status Feedback: None (Current Sensor)
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

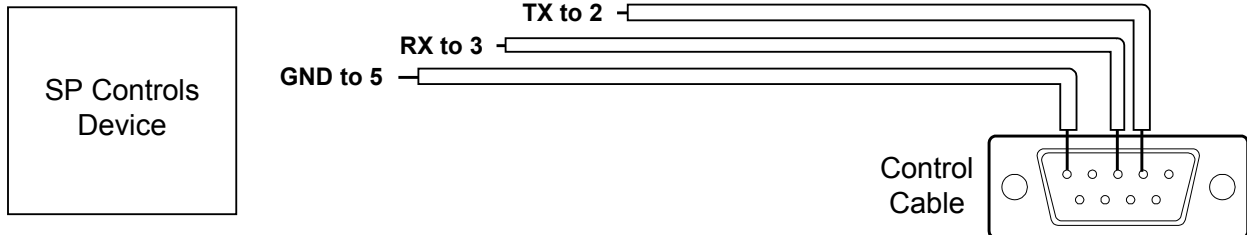

Connect female DB9 to projector port labeled *RS-232*.
Serial Adapters (for NRC only): None