



I. Driver Features

1. Command Format

This device is controlled through RS-232 commands.

2. RS-232 Commands


Power On	Menu On	Audio Mute On	Normal
Power Off	Menu Off	Audio Mute Off	Zoom
Volume Up	Adj Up	Video Mute On	Focus
Volume Down	Adj Down	Video Mute Off	
Source: Video	Auto Image	Freeze On	
Source: Computer	Adjust Right	Freeze Off	
	Adjust Left	Fine Sync Up	
	Enter	Fine Sync Down	

3. Other Driver Features

Default Power Status Feedback: Power Current Sensor or None
Projector Restart Lockout Timer (Default): 98 Seconds

II. RS-232 Control Wiring

Control of this projector requires use of the serial adapter cable included with the projector. Wire RS-232 control to a male DB9 as follows:

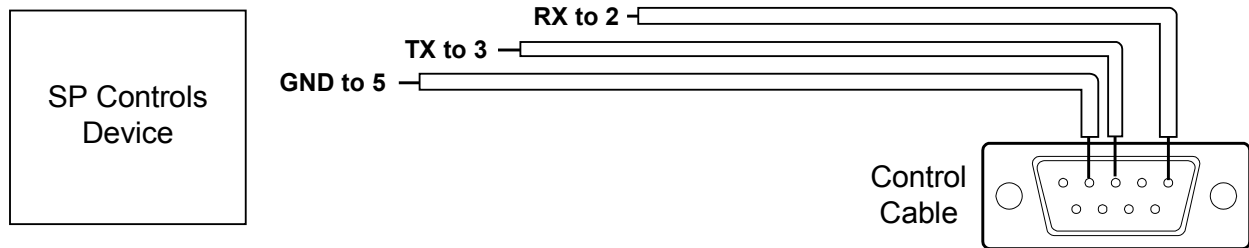

Connect male DB9 to the **adapter cable included with the Boxlight** and connect to the projector port labeled *CONTROL PORT*.

Serial Adapters (for NRC only): Converter A and B