



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Auto PC	Menu	Keystone Up
Power Off	Source: S-Video	Blank On	Adj Up	Keystone Down
Volume Up	Source: Computer 1	Blank Off	Adj Down	Magnify Up
Volume Down	Source: Computer 2 Digital	Sound Mute On	Adj Left	Magnify Down
	Source: Computer 2 Analog	Sound Mute Off	Adj Right	Freeze
			Select	

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 60 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

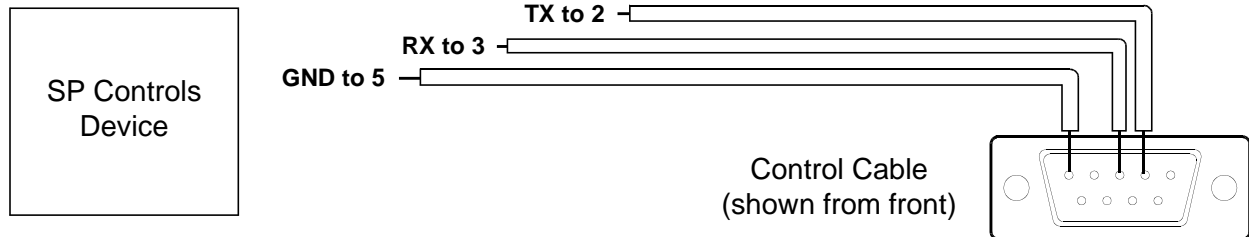

Connect female DB9 to projector port labeled *SERVICE PORT*.
Serial Adapters (for NRC only): None

III. Projector Configuration

Power Saving Mode: Verify that the projector's *Power Saving* mode is set to *Off* (projector default) in the projector's *SETUP* menu.

BAUD Rate: This driver is configured for 19200 bps (projector default). The projector BAUD rate may be changed in the *SETUP* menu – verify it is set to 19200.