



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On	Source: Composite Video	Source: M1 Analog	Menu	Auto Image
Power Off	Source: S-Video	Source: M1 Digital	Adjust Up	P in P
Volume Up	Source: RCA Video Digital	Source: M1 YPbPr	Adjust Down	Zoom Up
Volume Down	Source: RCA Video HD	Source: M1 YCbCr	Adjust Left	Zoom Down
	Source: VGA 1 Analog	Source: BNC Analog	Adjust Right	Focus Up
	Source: VGA 1 Digital	Source: BNC YPbPr	Left Click	Focus Down
	Source: VGA 1 HD	Source: BNC YCbCr	Right Click	Magnify Up
	Source: HDMI		Freeze	Magnify Down
			Blank	Magnify Off

### IR Commands


### 3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling  
 Projector Restart Lockout Timer (Default): 90 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 6-pin mini-DIN connector as follows:

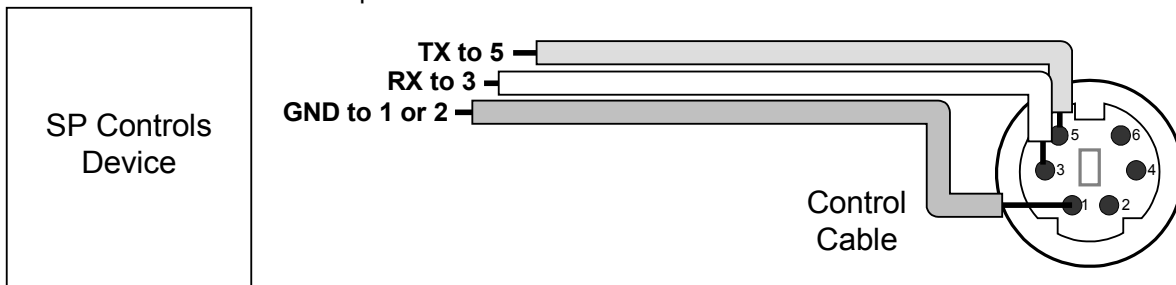

Connect male mini-DIN to projector port labeled RS-232.

Serial Adapters (for NRC only): n/a

**Note:** Dell does not provide a 6-pin adapter cable, so a 6-pin male DIN termination **must be ordered** prior to installation.