



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Menu	Zoom Up	OSD On
Power Off	Adjust Up	Zoom Down	OSD Off
Volume (absolute)	Adjust Down	Focus Up	
Channel 1- 15	Adjust Left	Focus Down	
	Adjust Right	Mute On	
	Enter	Mute Off	
	Exit	Help	


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling

*Projector Restart Lockout Timer (Default):* 6 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

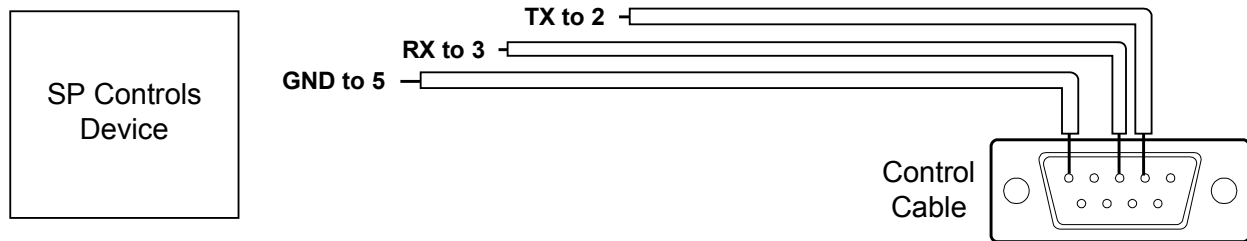

Connect female DB9 to projector port labeled *RS-232*.

*Serial Adapters* (for NRC only): None

## III. Projector Configuration

You may need to set DPMS to OFF in the *SET UP* submenu of the projector On-Screen Menus. If the projector does not respond to POWER ON commands from the control system, deactivate DPMS and try again.