



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands


Power On	Menu On	Auto Image	Freeze On
Power Off	Menu Off	Fine Sync Up	Freeze Off
Volume Up	Adj Up	Fine Sync Down	
Volume Down	Adj Down	Normal	
Source: Video	Adj Left	Audio Mute On	
Source: Computer	Adj Right	Audio Mute Off	
	Enter	Video Mute On	
		Video Mute Off	

### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 98 Seconds

## II. RS-232 Control Wiring

Wire the control cable to a male DB-9 cable as follows:

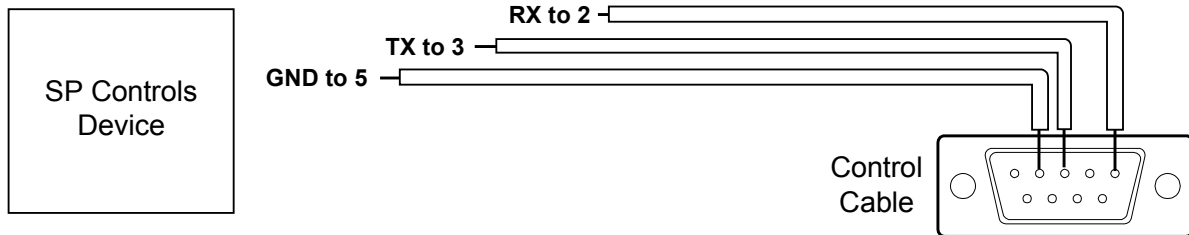

Connect male DB9 to Eiki serial adapter cable (ships with projector), then connect to the projector port labeled *Control Port*.

*Serial Adapters* (for NRC only): A and B