



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Menu On	Auto Image	Freeze On
Power Off	Menu Off	Normal	Freeze Off
Volume Up	Adj Up	Audio Mute On	Fine Sync
Volume Down	Adj Down	Audio Mute Off	Up
Source: Video	Adj Left	Video Mute On	Fine Sync
Source: Computer	Adj Right	Video Mute Off	Down
	Enter		


### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 98 Seconds

## II. RS-232 Control Wiring

Wire the control cable to a male DB-9 cable as follows:

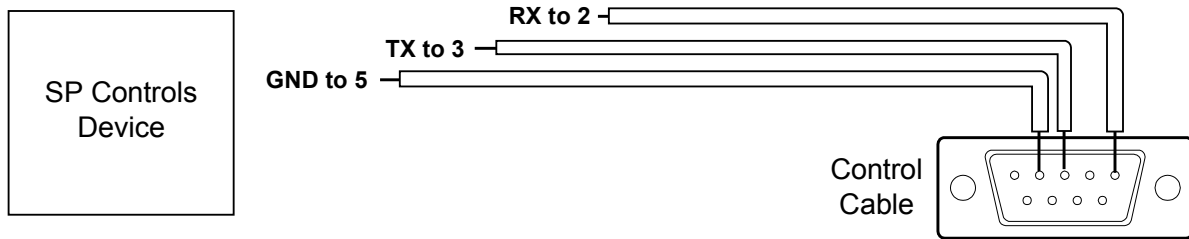

Connect male DB9 to Eiki serial adapter cable (ships with projector), then connect to the projector port labeled *Control Port*.

*Serial Adapters* (for NRC only): A and B