



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands


Power On	Source: Video	Menu	Zoom Up
Power Off	Source: S-Video	Adjust Up	Zoom Down
Volume Up	Source: RGB 1	Adjust Down	Focus Up
Volume Down	Source: RGB 2	Adjust Left	Focus Down
		Adjust Right	Video Mute
		Enter	

### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
Projector Restart Lockout Timer (Default): 215 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

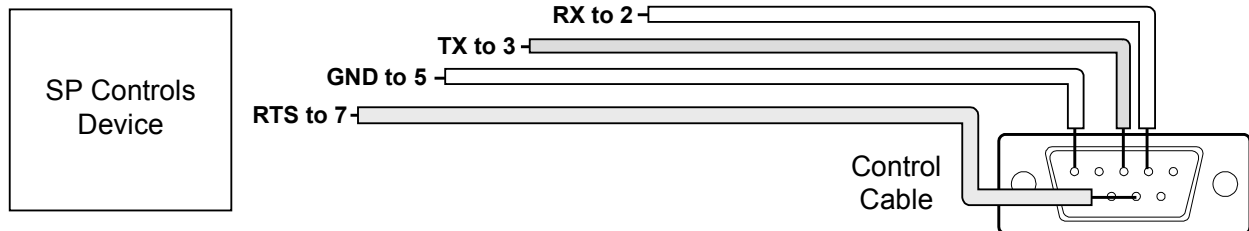

Connect female DB9 to projector port labeled *RS-232*.

*Serial Adapters* (for NRC only): None. If you wish to extend the RS-232 control cable from the NRC, you will need to wire pin 7 in addition to 2, 3, and 5