



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: BNC (RGB-Video)	Menu	Bright Up	Sync Up
Power Off	Source: BNC (RGB-Analog)	Adj Up	Bright Down	Sync Down
Volume Up	Source: YCbCr (BNC)	Adj Down	Help	Tracking Up
Volume Down	Source: YPbPr (BNC)	Adj Left	Resize	Tracking Down
Source: Video (RCA)	Source: Computer (VGA)	Adj Right	A/V Mute	
Source: S-Video	Source: DVI	Enter	E-Zoom Up	
	Source: EasyMP	Escape	E-Zoom Down	


3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling

Projector Restart Lockout Timer (Default): 42 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

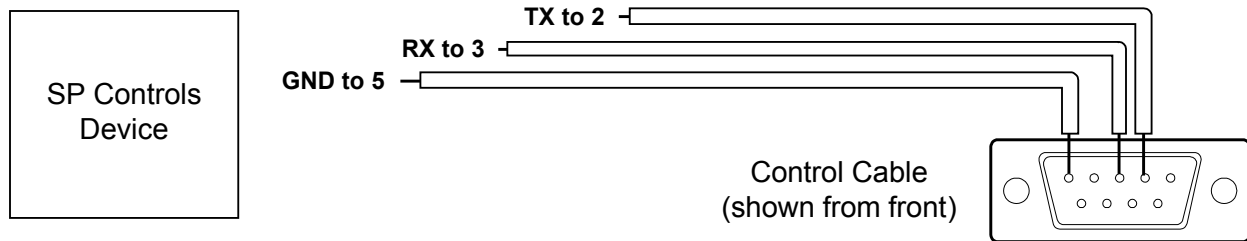

Connect female DB9 to projector port labeled *Control (RS-232c)*.

Serial Adapters (for NRC only): None

III. Projector Configuration

Projector Settings:

STARTUP SCREEN should be set to OFF in the ADVANCED1 Menu.

COM PORT must be set to RS-232 in the ADVANCED2 menu.

SLEEP MODE should be set to OFF in the SETTING Menu.

DISPLAY MESSAGE should be set to OFF in the SETTING Menu.