



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Computer 1 (Analog RGB)	Menu	Bright Up	Sync Up
Power Off	Source: Computer 2 (Analog RGB)	Adj Up	Bright Down	Sync Down
Volume Up	Source: DVI-D (DVI)	Adj Down	Help	Tracking Up
Volume Down	Source: D-RGB (DVI)	Adj Left	Resize	Tracking Down
Source: Video (RCA)	Source: Analog RGB (BNC)	Adj Right	A/V Mute	
Source: S-Video	Source: RGB-Video (BNC)	Enter	E-Zoom Up	
Source: YCbCr(BNC)	Source: EasyMP	Escape	E-Zoom Down	
Source: YPbPr(BNC)				

3. Other Driver Features

Default Power Status Feedback: RS-232 Power Polling
Projector Restart Lockout Timer (Default): 42 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

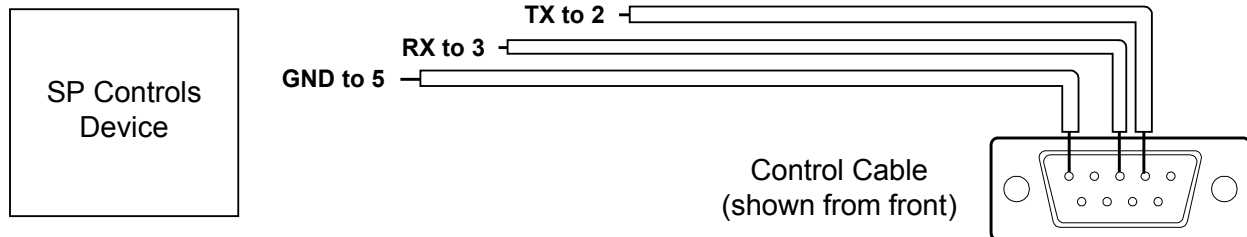

Connect female DB9 to projector port labeled *Control (RS-232c)*.
Serial Adapters (for NRC only): None

III. Projector Configuration

The Epson *COM PORT* setting must be set to *RS-232*. To set the *Com Port* open the projector's menu screen. Navigate to the *Advanced 2* menu and set *Com Port* to **RS-232**.