



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Comp Vid 1	Menu	Enter
Power Off	Source: Comp Vid 2	Adj Up	Escape
Volume (absolute)	Source: PC 1	Adj Down	AV Mute
Source: Video	Source: PC 2	Adj Left	E-Zoom Up
Source: S-Video	Source: Easy MP	Adj Right	E-Zoom Down
			Freeze

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 45 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

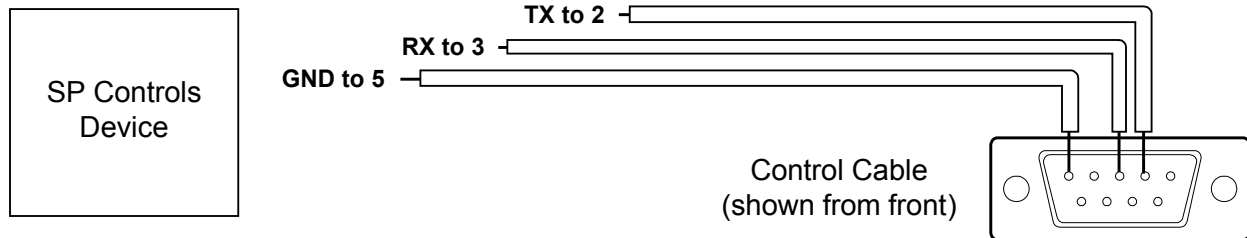

Connect female DB9 to projector port labeled *Control (RS-232C)*.
Serial Adapters (for NRC only): None

III. Projector Configuration

To allow control from the SmartPanel, the Epson PowerLite 835p *must* be set to COM Port > RS-232C in the *EXTENDED* projector menu.

Activate the projector onscreen menu. Scroll down to the *EXTENDED* menu. Verify the *COM Port* setting is set to *RS-232C*. If not, set the projector to *RS-232C*.