



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

| | | | | |
|---------------|-------------------------|-------------|------------|--------------|
| Power On | Source: Video | Menu | Freeze | Zoom Up |
| Power Off | Source: S-Video | Adj Up | Blank | Zoom Down |
| Volume Up | Source: Component Video | Adj Down | Auto Image | Magnify Up |
| Volume Down | Source: RGB 1 | Adj Left | Focus Up | Magnify Down |
| Keystone Up | Source: RGB 2 | Adj Right | Focus Down | Magnify Off |
| Keystone Down | Source: DVI | Left Click | Mute | |
| | | Right Click | P in P | |


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
 Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

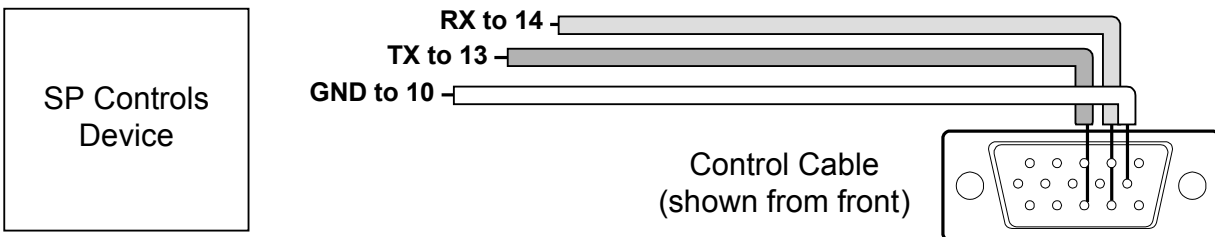

Connect female HD15 to projector port labeled **CONTROL**.
 Serial Adapters (for NRC only): B, C, and D