



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On
Power Off
Source: Video
Source: S-Video
Source: Component Video
Source: Computer 1 (Dsub)
Source: Computer 2 (RGBHV)

### IR Commands

Volume Up	Menu	Zoom "T"
Volume Down	Adj Up	Zoom "W"
AV Mute	Adj Down	Focus Up
Preset	Adj Left	Focus Down
Quick Align	Adj Right	
	Enter	
	Back	


### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 92 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

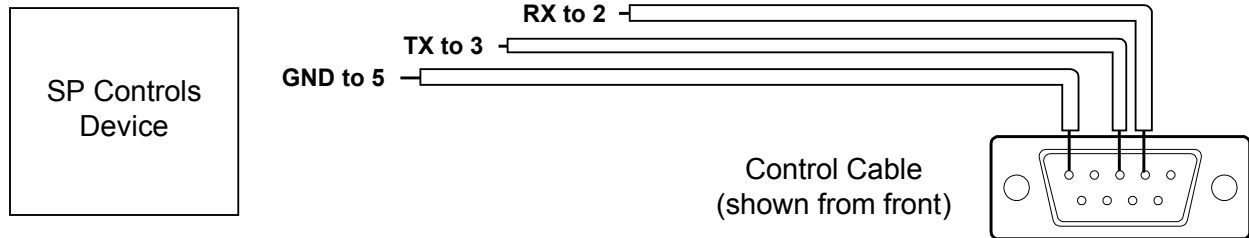

Connect female DB9 to projector port labeled *CONTROL - RS-232C*.  
*Serial Adapters (for NRC only):* B