



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Volume Up	P in P
Power Off	Volume Down	Swap
Source: Video	Menu	Sub Input
Source: S-Video	Adj Up	Twin Picture
Source: Component	Adj Down	Zoom Up
Source: RGB	Adj Left	Zoom Down
Source: DVI	Adj Right	Repeat
	Enter	


3. Other Driver Features

Default Power Status Feedback: None
Projector Restart Lockout Timer (Default): 10 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

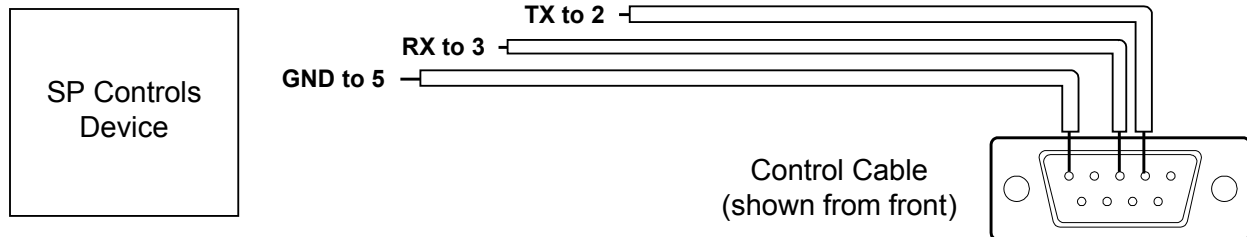

Connect female DB9 to projector port labeled RS-232C.
Serial Adapters (for NRC only): None