



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video
Power Off	Source: S-Video
Volume Up	Source: Component Video
Volume Down	Source: RGB 1
Keystone Up	Source: RGB 2
Keystone Down	Source: DVI

IR Commands

Menu	Mute	Magnify Up
Adj Up	P in P	Magnify Down
Adj Down	Freeze	Magnify Off
Adj Left	Blank	Zoom Up
Adj Right	Auto Image	Zoom Down
Left Click	Focus Up	
Right Click	Focus Down	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 80 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female HD15 as follows:

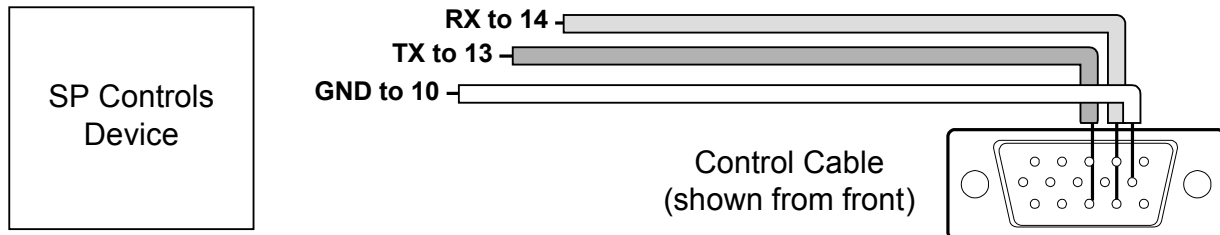

Connect female HD15 to projector port labeled *CONTROL*.

Serial Adapters (for NRC only): B,C, and D