



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands

Power On	Source: Video	Menu	Auto Position
Power Off	Source: S-Video	Adj Up	Still
Volume (level)	Source: Component	Adj Down	16:9
Mute	Source: Computer 1	Adj Left	Keystone
	Source: HDMI 1	Adj Right	Expand
	Source: HDMI 2	Enter	P in P

### 3. Other Driver Features

*Default Power Status Feedback:* RS-232 Polling  
*Projector Restart Lockout Timer (Default):* 65 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:



Connect female DB9 to projector port labeled *SERIAL*.  
*Serial Adapters* (for NRC only): None