



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video 1	Menu	Focus/Zoom	Auto Position
Power Off	Source: Video 2	Adj Up	Focus/Zoom Up	Still
Volume Up	Source: Computer 1	Adj Down	Focus/Zoom Down	
Volume Down	Source: Computer 2	Adj Left	Expand	
		Adj Right	Mute	
		Enter	P in P	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 85 Seconds

II. RS-232 Control Wiring

Adapter Cable Required: The Mitsubishi RS-232 control port is an 8-pin mini-DIN connector and requires use of the RS-232 adapter cable (included with projector).

Wire RS-232 control to a male DB9 as follows:

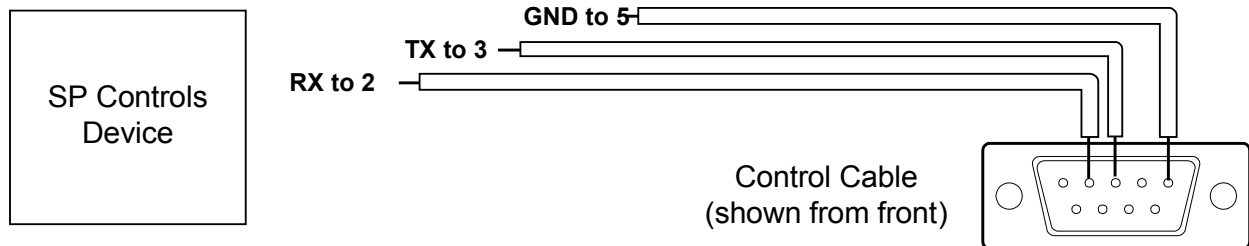

Connect male DB9 to Mitsubishi RS-232 mini-DIN adapter cable. Connect adapter cable to the projector port labeled *RS-232C*.

Serial Adapters (for NRC only): A and B

III. Projector Configuration

Auto Power Off: This feature automatically shuts the projector off if it does not receive a signal for a configurable amount of time. You may wish to disable it and use the Inactivity Shutdown Timer instead, when available. To disable *Auto Power* using onscreen menus, scroll to the *Installation* submenu and verify that *Sleep Mode* is set to *OFF*. If not, enter the menu and toggle them to *OFF*.