



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video	Menu	Auto Position
Power Off	Source: S-Video	Adj Up	Still
Volume (absolute)	Source: Computer 1	Adj Down	16 : 9
Mute	Source: Computer 2	Adj Left	Keystone
	Source: DVI	Adj Right	Expand
		Enter	P in P


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

Adapter Cable Required: The Mitsubishi RS-232 control port is an 8-pin mini-DIN connector and requires use of the RS-232 adapter cable (included with projector).

Wire RS-232 control to a male DB9 as follows:

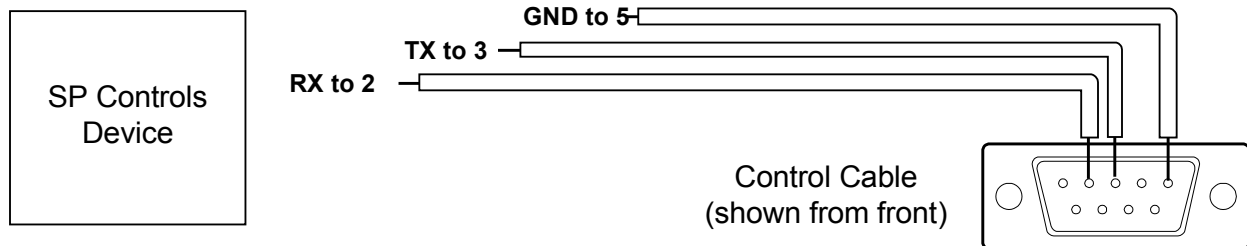

Connect male DB9 to Mitsubishi RS-232 mini-DIN adapter cable. Connect adapter cable to the projector port labeled *SERIAL*.

Serial Adapters (for NRC only): A and B