



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On	Source: Video 1	Volume Up
Power Off	Source: Video 2	Volume Down
	Source: Video 3	
	Source: HD	
	Source: PC	

### IR Commands


### 3. Other Driver Features

Default Power Status Feedback: None  
Projector Restart Lockout Timer (Default): 2 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

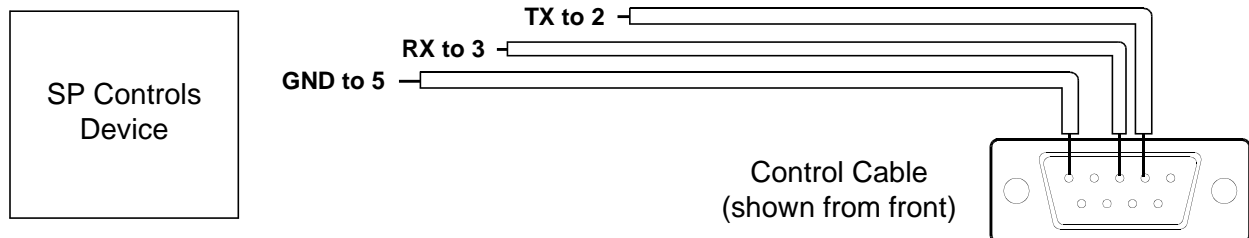

Connect female DB9 to projector port labeled *RS-232C*.  
Serial Adapters (for NRC only): None