



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

| | | | | |
|-----------------|---------------------|-----------|--------------|--------------|
| Power On | Source: RGB 1 | Menu | Volume Up | Pic Mute On |
| Power Off | Source: RGB 2 | Adj Up | Volume Down | Pic Mute Off |
| Source: Video 1 | Source: DVI Digital | Adj Down | Focus Up | |
| Source: Video 2 | Source: DVI Analog | Adj Left | Focus Down | |
| Source: S-Video | Source: PC Card | Adj Right | Magnify Up | |
| | | Select | Magnify Down | |
| | | Cancel | | |


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
 Projector Restart Lockout Timer (Default): 112 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

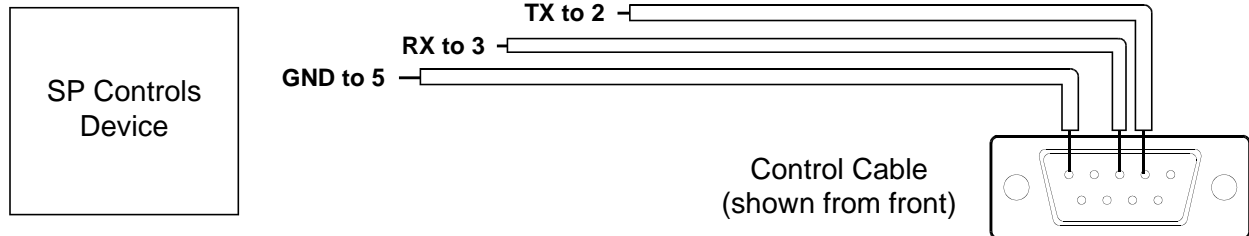

Connect female DB9 to projector port labeled *PC Control In*.
 Serial Adapters (for NRC only): None