



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Menu	Volume Up
Power Off	Source: S-Video	Adj Up	Volume Down
Pic Mute On	Source: RGB 1	Adj Down	
Pic Mute Off	Source: RGB 2	Adj Left	
	Source: PC Card	Adj Right	
		Select	
		Cancel	

IR Commands


3. Other Driver Features

Default Power Status Feedback: None
Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

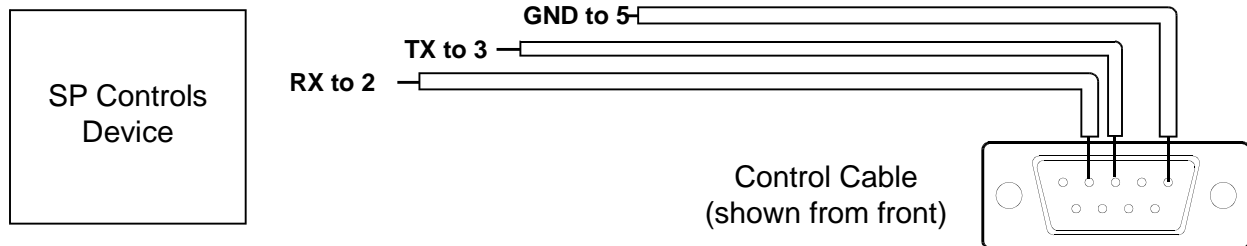

Connect male DB9 to the NEC mini-DIN adapter cable (included with projector, and connect to the projector port labeled *PC CONTROL*).

Serial Adapters (for NRC only): A and B