



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Source: Video	Pic Mute On	Menu
Power Off	Source: S-Video	Pic Mute Off	Adj Up
Volume Up	Source: Viewer	Sound Mute On	Adj Down
Volume Down	Source: Computer 1	Sound Mute Off	Adj Left
Auto Adjust	Source: Computer 2	On Screen Mute On	Adj Right
Auto Adjust On	Source: Computer 3	On Screen Mute Off	Select
Auto Adjust Off			Cancel


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
 Projector Restart Lockout Timer (Default): 72 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

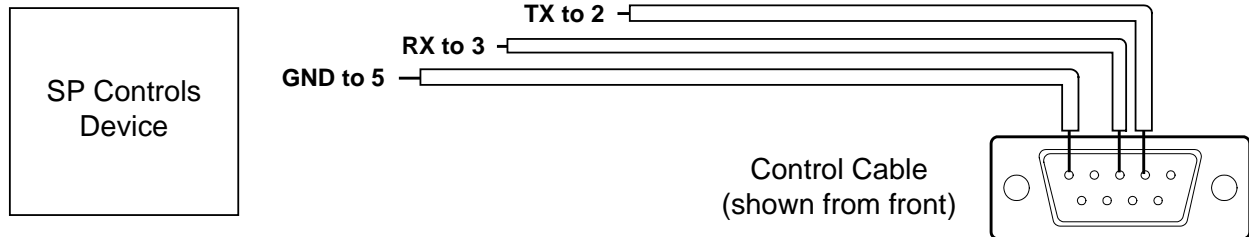

Connect female DB9 to projector port labeled *PC CONTROL*.
 Serial Adapters (for NRC only): None