



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

IR Commands

Power On	Pic Mute On	Menu	Volume Up
Power Off	Pic Mute Off	Adj Up	Volume Down
Source: Video	Sound Mute On	Adj Down	Select
Source: S-Video	Sound Mute Off	Adj Left	Cancel
Source: RGB		Adj Right	Aspect


3. Other Driver Features

Default Power Status Feedback: None
 Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 8-pin mini-DIN as follows:

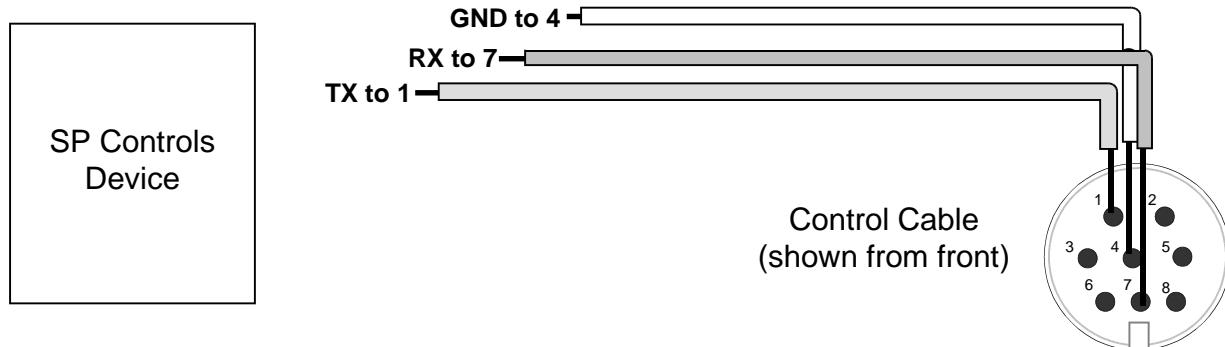

Connect male mini-DIN to port labeled *PC Control*.

Serial Adapters (for NRC only): N/A

III. Projector Control Note

The Projector **must** be configured to communicate at **19200**. To set the VT46 projector to communicate at **19200**, open the NEC's onscreen menus and select **ADVANCED > PAGE 2 > COMMUNICATION SPEED**. Select **19200** and exit the projector menus.