



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Pic Mute On	Menu	Cancel
Power Off	Source: S-Video	Pic Mute Off	Adj Up	Magnify +
Volume Up	Source: RGB	Sound Mute On	Adj Down	Magnify -
Volume Down	Source: DVI-D	Sound Mute Off	Adj Left	
	Source: DVI-A	On Screen Mute On	Adj Right	
	Source: PC Card	On Screen Mute Off	Select	

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male 8-pin mini-DIN as follows:

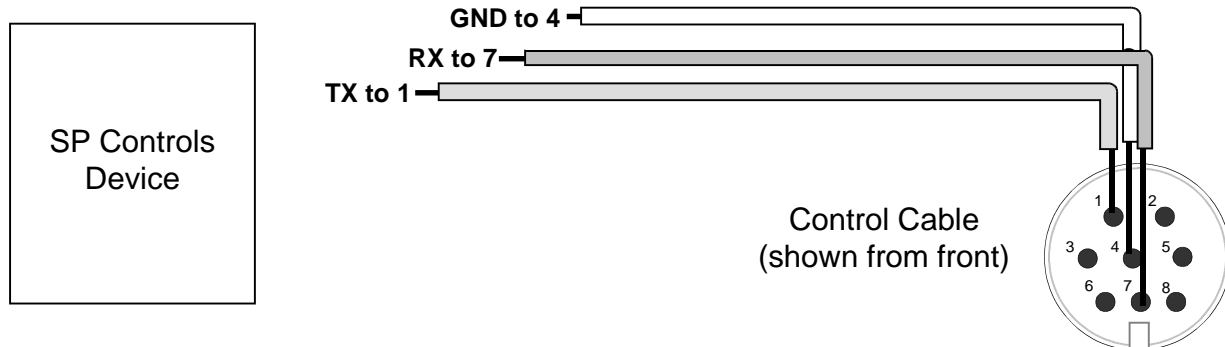

Connect 8-pin mini-DIN to projector port labeled *PC CONTROL*.

Serial Adapters (for NRC only): N/A