



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Composite Video	Menu	Zoom
Power Off	Source: Component Video	Adj Up	Keystone
Volume Up	Source: S-Video	Adj Down	Brightness
Volume Down	Source: HDTV	Adj Left	Contrast
	Source: Analog RGB	Adj Right	
	Source: Digital RGB	Enter	
	Source: PC	Freeze	

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 65 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 as follows:

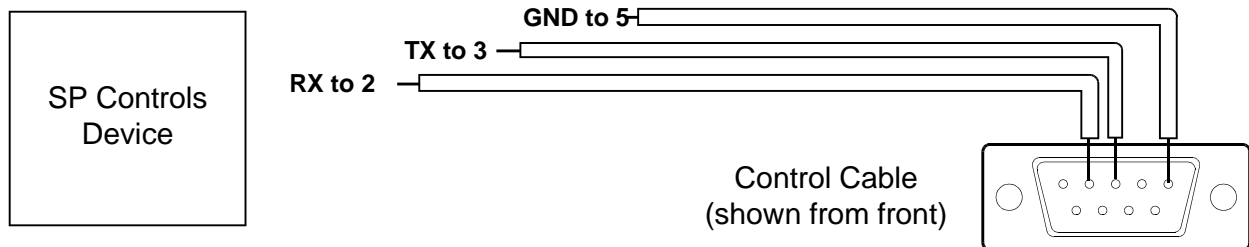

Connect male DB9 to projector port labeled *RS-232*.
Serial Adapters (for NRC only): A and B

Warning – SP Controls does NOT recommend use of this projector

The Optoma EP757 employs auto synchronization to find a source to display. This may cause the source displayed to be different than the source selected. As of current there is no way to disable this functionality.

To prevent this type of behavior:

Use four sources with this projector. Be sure that the signals are active. This will ensure that the projector will only switch to the specified source.