



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Menu	Auto Setup
Power Off	Source: S-Video	Adj Up	Mute
Volume (level)	Source: RGB 1	Adj Down	Freeze
	Source: RGB 2	Adj Left	Index Window
	Source: Network	Adj Right	Digital Zoom Up
	Source: SD Card	Enter	Digital Zoom Down

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 67 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

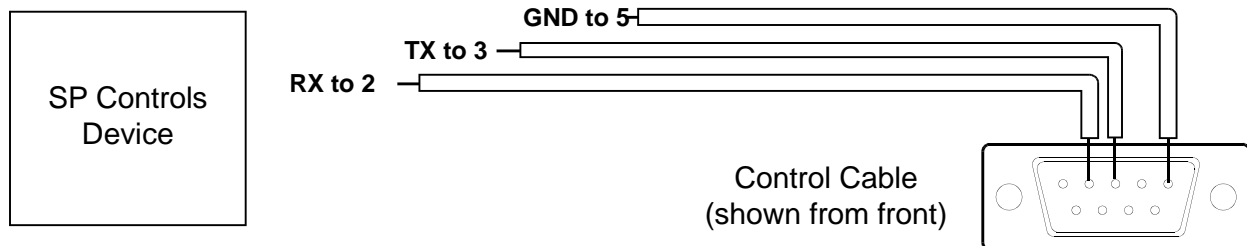

Connect male DB9 to projector port labeled *Serial*.
Serial Adapters (for NRC only): A and B