



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

Power On	Source: Video	Menu	Freeze
Power Off	Source: S-Video	Adj Up	Standard
Volume (level)	Source: RGB 1	Adj Down	Index
	Source: RGB 2	Adj Left	Digital Zoom Up
		Adj Right	Digital Zoom Down
		Enter	Shutter

### IR Commands


### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
Projector Restart Lockout Timer (Default): 67 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

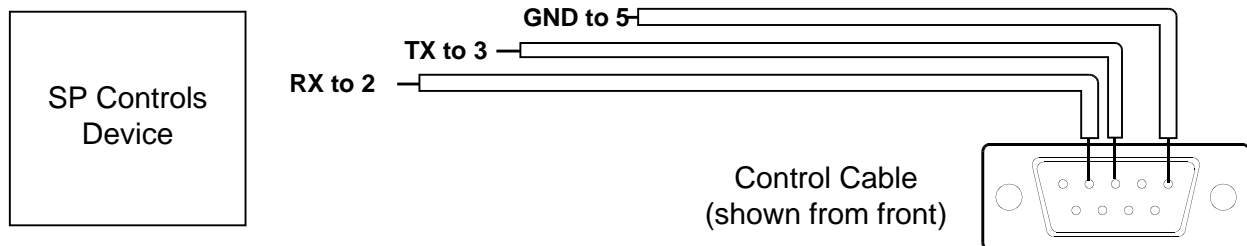

Connect male DB9 to projector port labeled *Serial*.  
*Serial Adapters* (for NRC only): A and B

## III. Projector Configuration

If you wish to use RGB2 as an input, it must be configured for INPUT in the Panasonic on-screen menu. Scroll down to the OPTIONS1 sub-menu and verify that *RGB2 SELECT* is set to *INPUT*.