



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232.

### 2. RS-232 Commands


Power On	Source: Video 1	Menu	Mute On
Power Off	Source: Video 3	Adj Up	Mute Off
Volume (level)	Source: Video 3	Adj Down	Blank On
	Source: Computer 1	Adj Left	Blank Off
	Source: Computer 2	Adj Right	
	Source: Computer 3	Select	

### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
Projector Restart Lockout Timer (Default): 90 Seconds

## II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

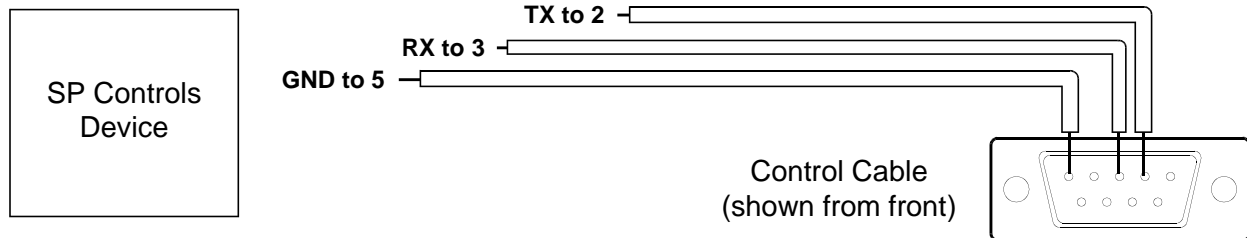

Connect female DB9 to projector port labeled *Serial Control*.  
*Serial Adapters* (for NRC only): None

## III. Projector Configuration

**Set Auto Source to OFF**– Using the Proxima menus navigate to the *Sources* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO SOURCE* option.

**Set Auto Power to OFF** - Using the Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO POWER* option.

**Set Power Save to OFF** - Using the Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *POWER SAVE* option.