



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video 1	Adj Up	Fine Sync +	IR Commands Menu +Adjust Up +Adjust Down +Volume Up +Volume Down
Power Off	Source: Video 2	Adj Down	Fine Sync -	
Volume Up	Source: Computer 1	Adj Left	Zoom	
Volume Down	Source: Computer 2	Adj Right	Focus	
		Enter	Normal	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 75 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a male DB9 as follows:

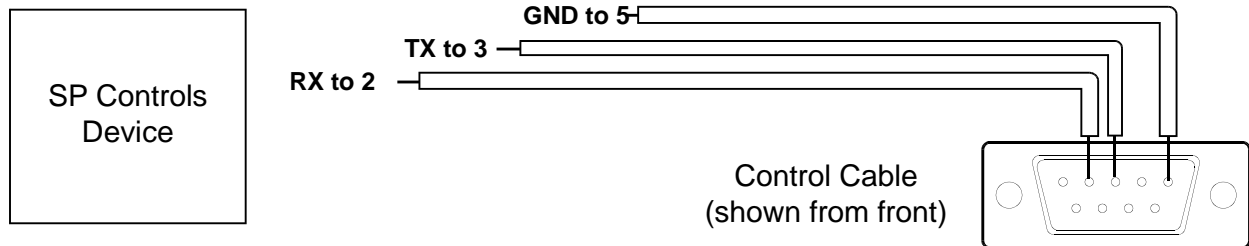

Connect male DB9 to the Proxima DB9/mini-DIN serial adapter cable to the projector port labeled *CONTROL PORT2*.

Serial Adapters (for NRC only): A and B