



## I. Driver Features

### 1. Command Format

This device is controlled through RS-232 only.

### 2. RS-232 Commands

### IR Commands

Power On	Source: PC	Mute On	none
Power Off	Source: BNC	Mute Off	
Volume Up	Source: S-Video		
Volume Down	Source: DVI		
	Source: Component		
	Source: MagicInfo		
	Source: DVI Video		
	Source: TV		
	Source: DTV		
	Source: HDMI 1		
	Source: HDMI 2		
	Source: Video		


### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
Projector Restart Lockout Timer (Default): 72 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

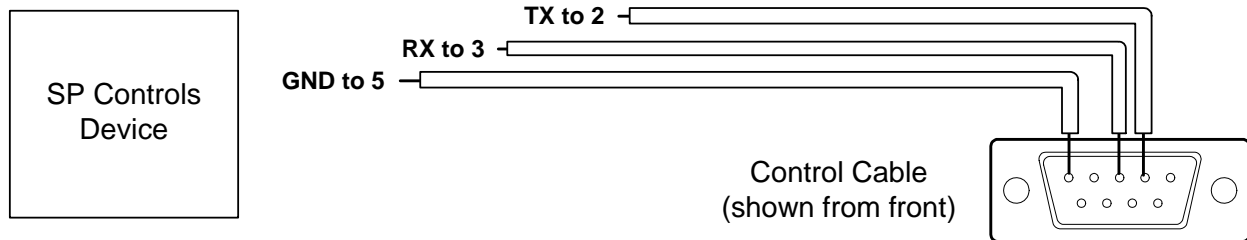

Connect female DB9 to projector port labeled *PC CONTROL*.  
Serial Adapters (for NRC only): None