



I. Driver Features

1. Command Format

This device is controlled through RS-232 Commands.

2. RS-232 Commands

Power On	Source: HDMI	Auto Image	Aspect 4:3	Menu On
Power Off	Source: Video	Magnify Up	Aspect Full	Menu Off
Volume Up	Source: Computer 1	Magnify Down		Adj Up
Volume Down	Source: Computer 2	Freeze On		Adj Down
Mute On	Source: S-Video	Freeze Off		Adj Left
Mute Off	Source: Component	Keystone +		Adj Right
Video Mute On	Source: Analog	Keystone -		Enter
Video Mute Off	Source: RGB	Digital Zoom +		
		Digital Zoom -		


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

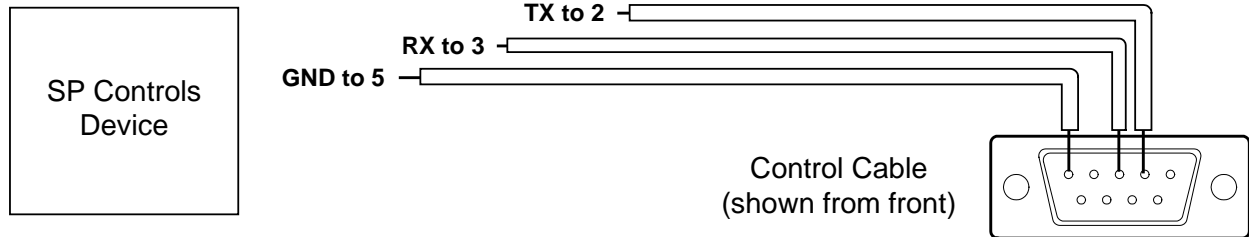

Connect female DB9 to projector port labeled RS-232.
Serial Adapters (for NRC only): None