



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


Power On	Source: Video	Mute
Power Off	Source: S-Video	Blank
Volume (level)	Source: VGA 1	Freeze
		Auto Image
		Keystone

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 40 seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

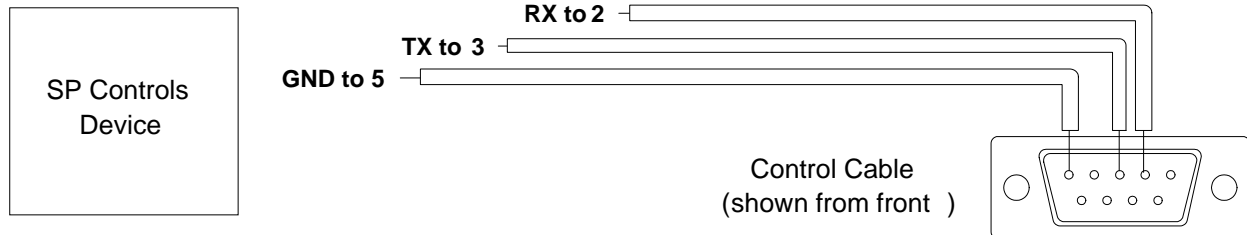

Serial Adapters (for NRC only): B

III. Projector Information

Attention: Vivitek's *AUTO SOURCE* feature must be disabled or the control system will not be able to control input selection. In the projector *INSTALLATION II* menu, select *AUTO SOURCE* and set to OFF.