



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Menu	Black On
Power Off	Adj Up	Black Off
Volume (Absolute)	Adj Down	
Source: VIDEO	Select	
Source: S-VIDEO	Mute On	
Source: Computer 1	Mute Off	
Source: Computer 2		

3. Other Driver Features


Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 125 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

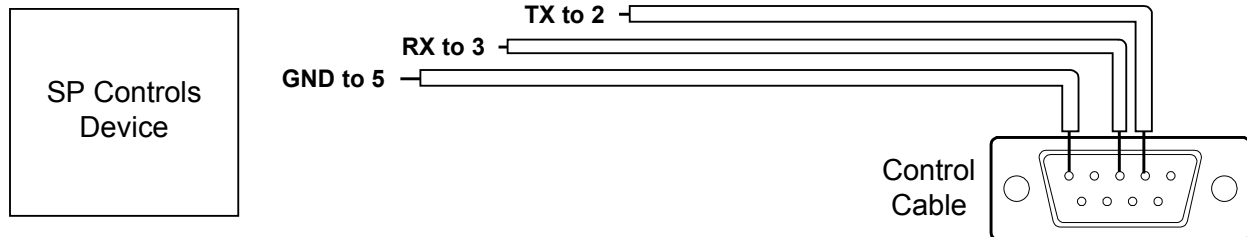

Connect female DB9 to projector port labeled *Serial Control*.
Serial Adapters (for NRC only): None

III. Projector Configuration

Set Auto Source to OFF– Using the ASK Proxima menus navigate to the *Sources* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO SOURCE* option.

Set Auto Power to OFF - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *AUTO POWER* option.

Set Power Save to OFF - Using the ASK Proxima menus navigate to the *System* menu, which is found inside the *Settings* menu, and **UNCHECK** the *POWER SAVE* option.