



## I. Driver Features

### 1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

### 2. RS-232 Commands

### IR Commands

Power On	Source: Video	Auto Adjust	Menu
Power Off	Source: S-Video	Black On	Adj Up
Volume Up	Source: Component Video	Black Off	Adj Down
Volume Down	Source: RGB 1	Keystone Up	Adj Left
Mute On	Source: RGB 2	Keystone Down	Adj Right
Mute Off			


### 3. Other Driver Features

Default Power Status Feedback: RS-232 Polling  
 Projector Restart Lockout Timer (Default): 78 Seconds

## II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

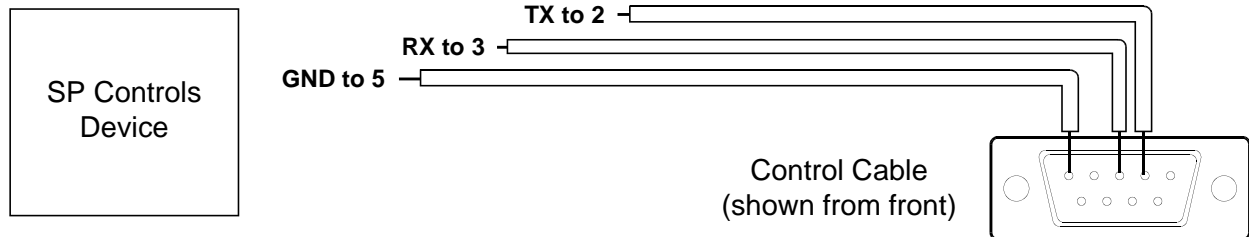

Connect female DB9 to projector port labeled *CONTROL*.  
 Serial Adapters (for NRC only): None