



I. Driver Features

1. Command Format

This device is controlled through a combination of RS-232 and IR commands; both are necessary for full control of the device.

2. RS-232 Commands

Power On	Source: Video	Keystone Up	Aspect 4:3	Menu	Freeze	Zoom Up
Power Off	Source: S-Video	Keystone Down	Aspect 16:9	Adj Up	Blank	Zoom Down
Volume Up	Source: Component	Blank On	Aspect 14:9	Adj Down	Auto Image	
Volume Down	Video	Blank Off	Aspect Small	Adj Left	Magnify Up	
	Source: RGB 1	Mute On	Aspect Normal	Adj Right	Magnify Down	
	Source: RGB 2	Mute Off		Left Click	Magnify Off	
	Source: DVI			Right Click	Mute	

IR Commands


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 81 Seconds

II. RS-232 Control Wiring

For IR wiring, see product manual for the SP Controls device.

Wire RS-232 control to a female DB9 as follows:

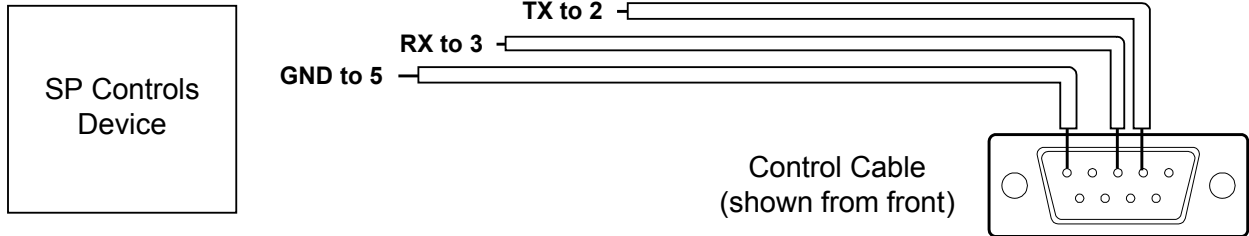

Connect female DB9 to projector port labeled *RS-232*.
Serial Adapters (for NRC only): None