



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands

Power On	Source: Video 1	Menu	Auto Position
Power Off	Source: Video 2	Adj Up	Still
Volume (absolute)	Source: Computer 1	Adj Down	Expand
Focus/Zoom	Source: Computer 2	Adj Left	Mute
Focus/Zoom Up		Adj Right	P in P
Focus/Zoom Down		Enter	


3. Other Driver Features

Default Power Status Feedback: RS-232 Polling

Projector Restart Lockout Timer (Default): 100 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a female DB9 as follows:

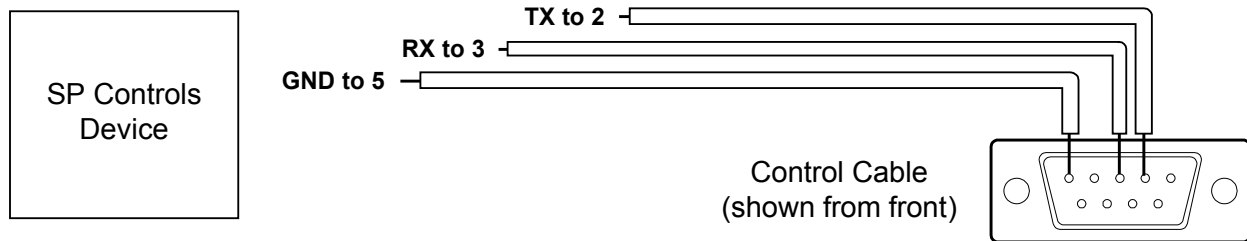

Connect female DB9 to the projector port labeled *RS-232C*.

Serial Adapters (for NRC only): None