



I. Driver Features

1. Command Format

This device is controlled through RS-232.

2. RS-232 Commands


| | | | |
|----------------|-----------------|-----------|-------------------|
| Power On | Source: Video | Menu | Freeze On |
| Power Off | Source: S-Video | Adj Up | Freeze Off |
| Volume (level) | Source: RGB 1 | Adj Down | Digital Zoom Up |
| Auto Setup | Source: RGB 2 | Adj Left | Digital Zoom Down |
| | Source: BNC | Adj Right | Shutter On |
| | Source: DVI | Enter | Shutter Off |

3. Other Driver Features

Default Power Status Feedback: RS-232 Polling
Projector Restart Lockout Timer (Default): 90 Seconds

II. RS-232 Control Wiring

Wire RS-232 control to a male DB9 as follows:

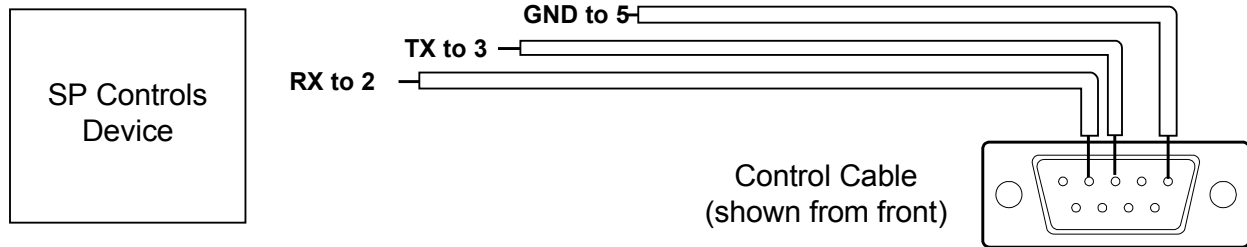

Connect male DB9 to projector port labeled *SERIAL IN*.
Serial Adapters (for NRC only): A and B